


Thank you for purchasing a BulDock Jet Slider 350!

This guide will show how to assemble, step by step.

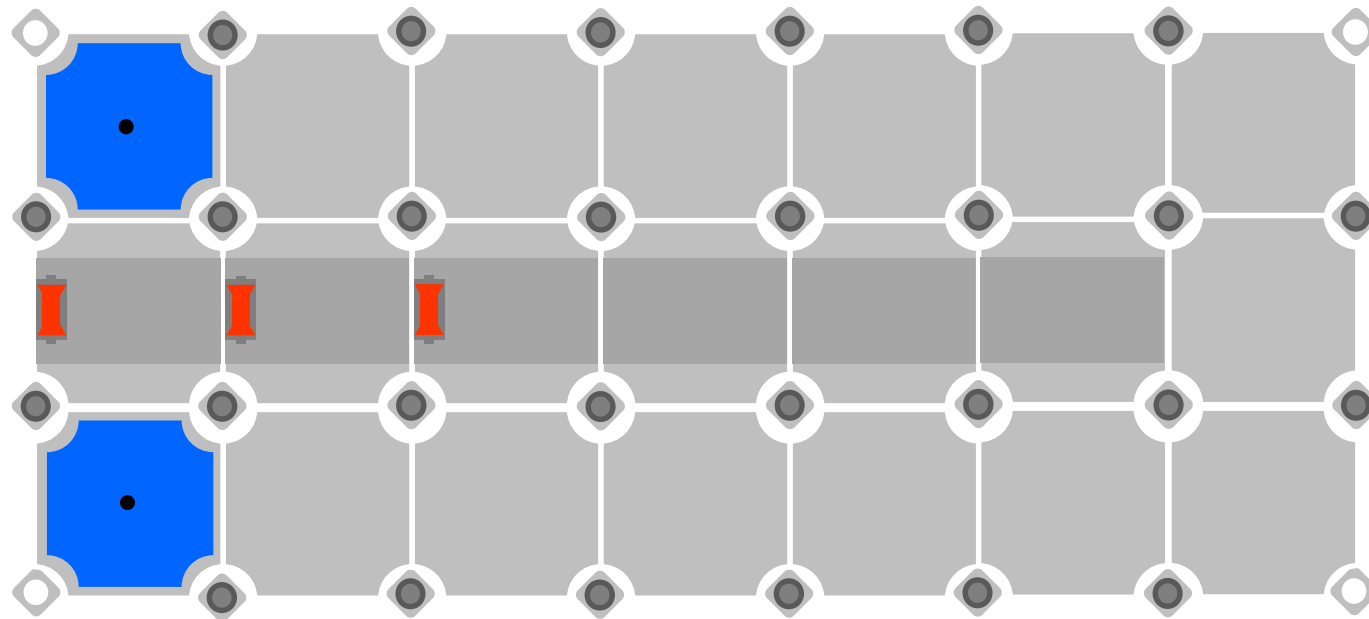

Side view:



15x



3x



3x



28x



4x



2x




A pallet is normally loaded like this.

Section D + Accessories


Section C

Section B


Section A

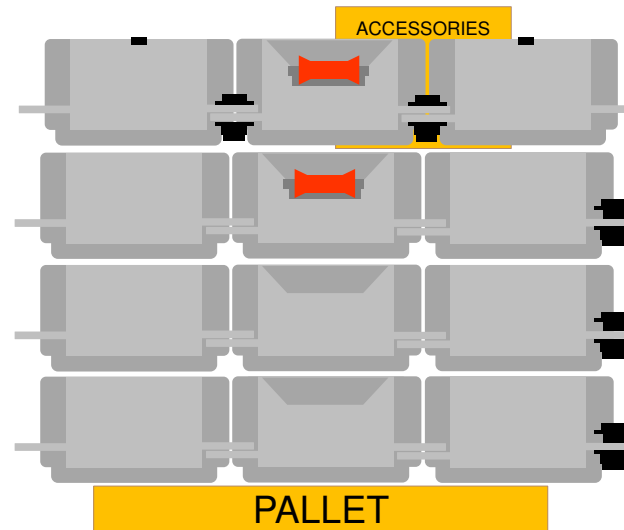


The sections are located like this:

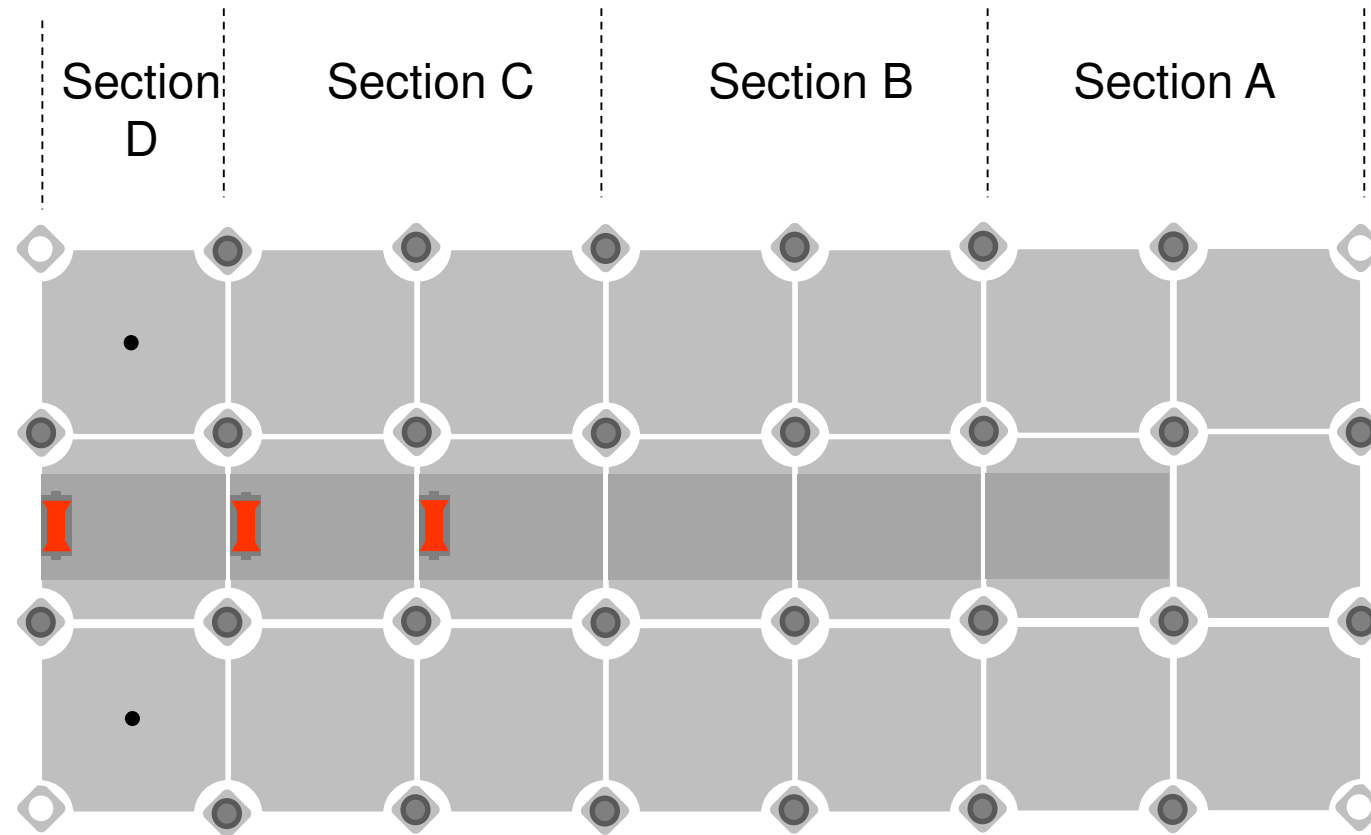

Side view:

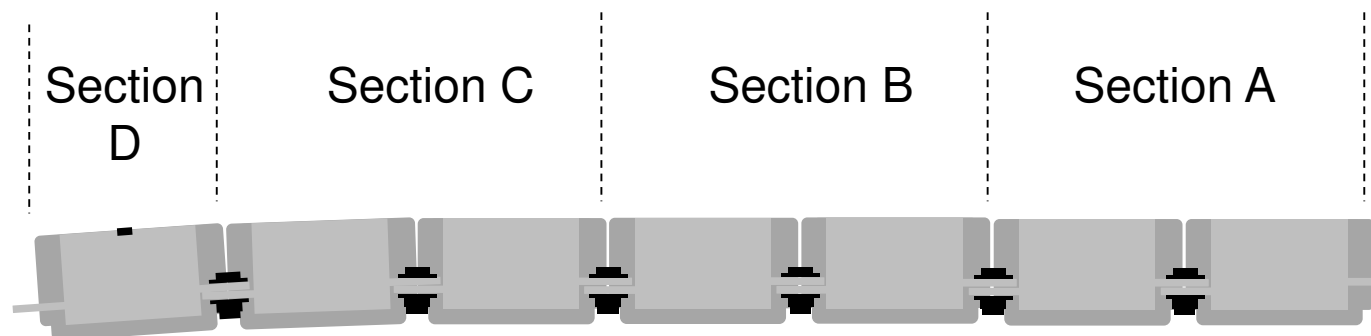

Valves are always pointing forward! Towards land!

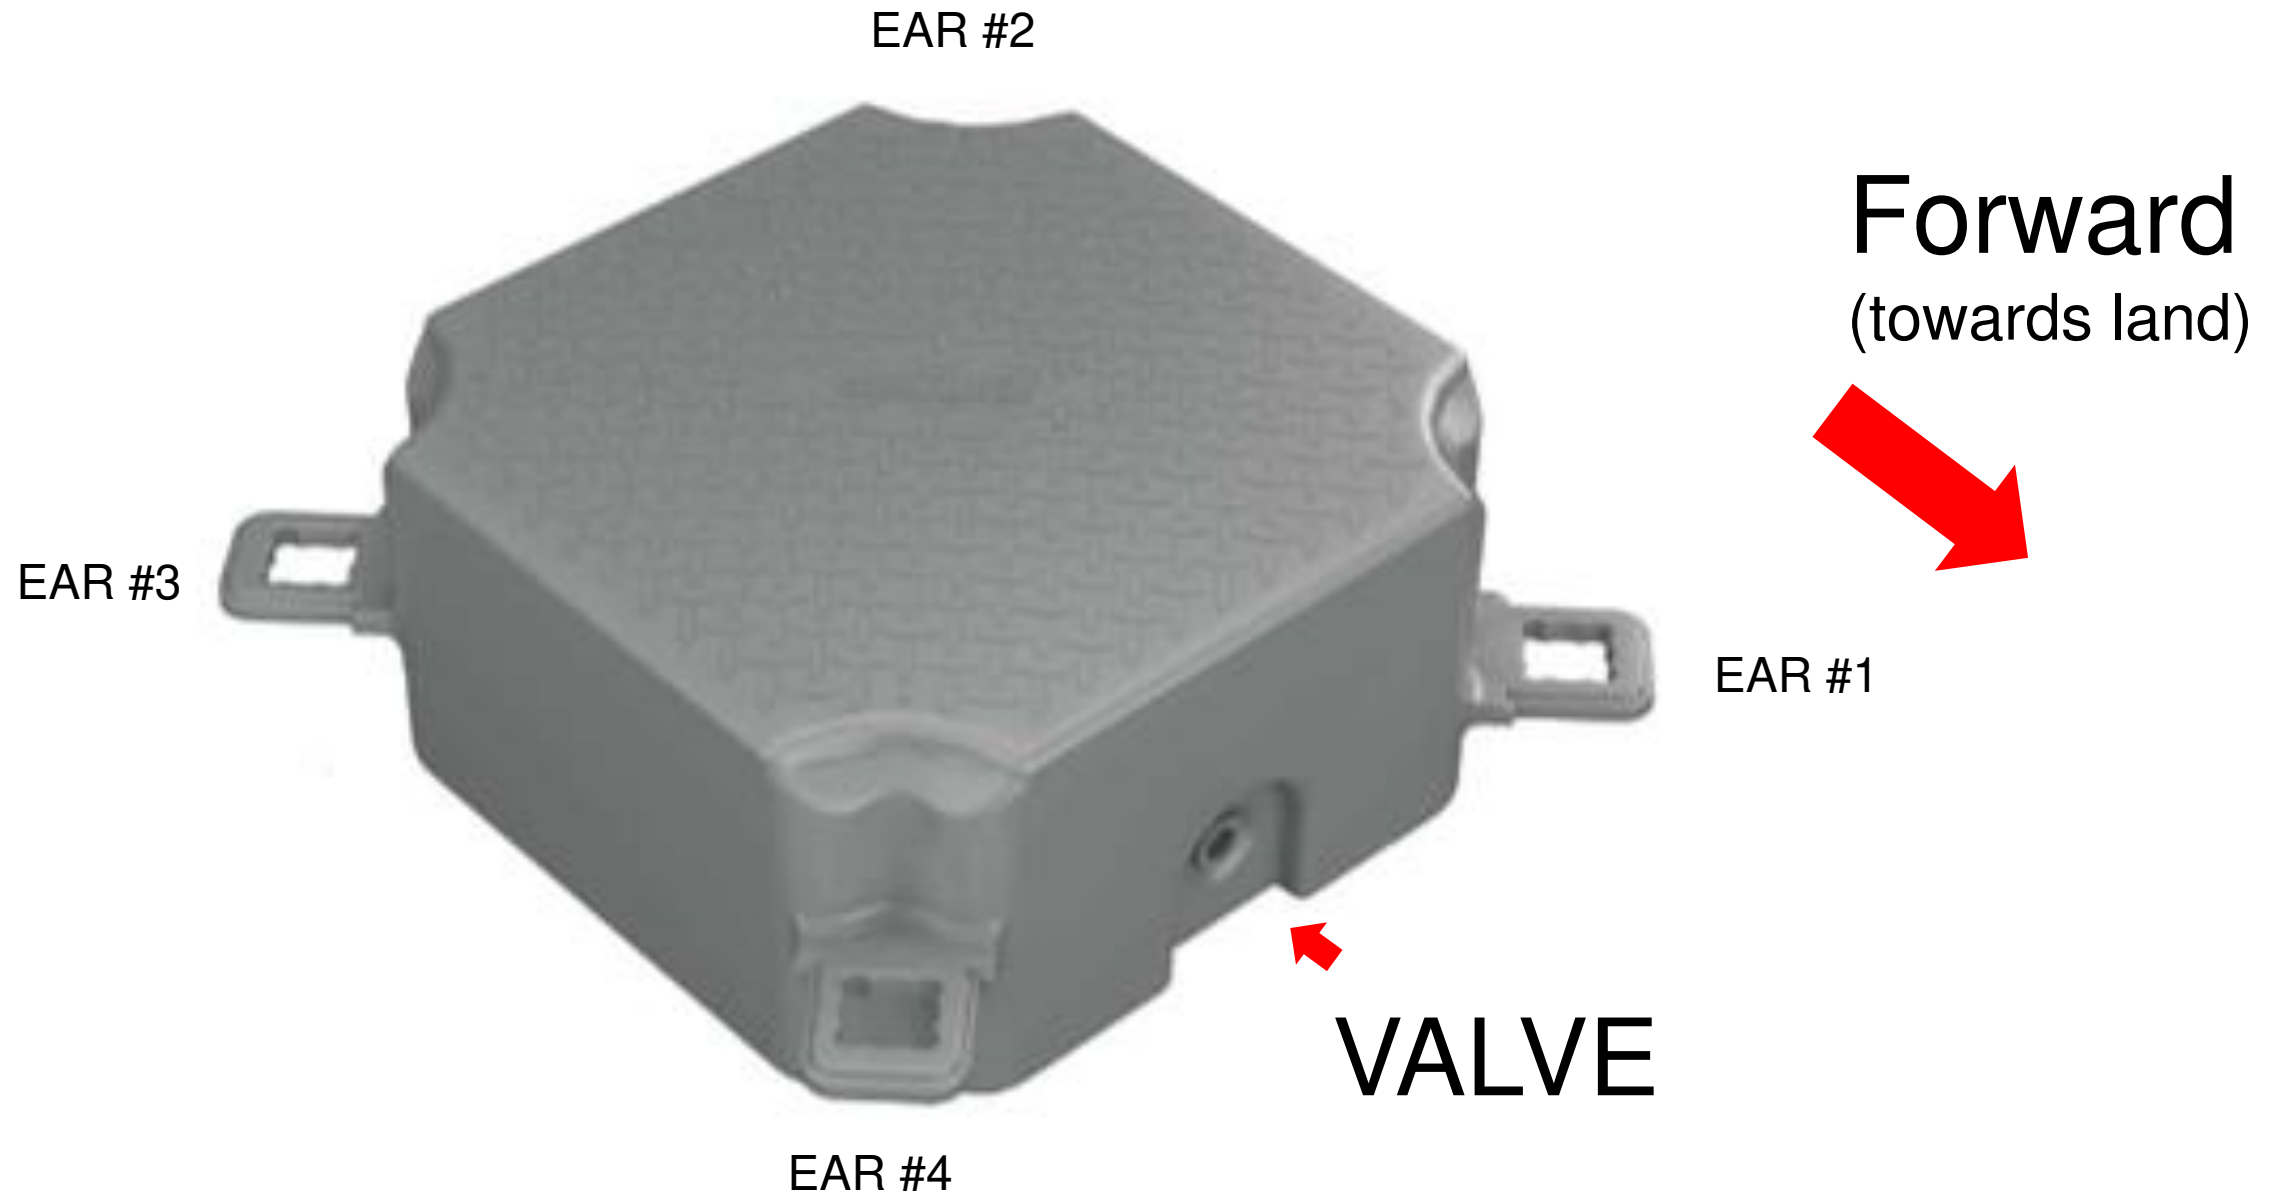





Please unload the pallet and place all sections on the ground.

Section D


Section C

Section B


Section A

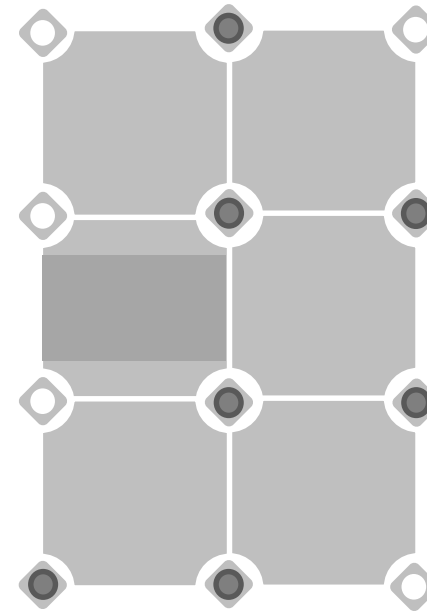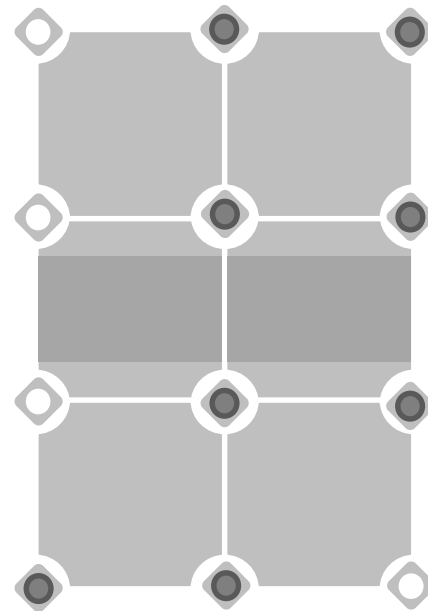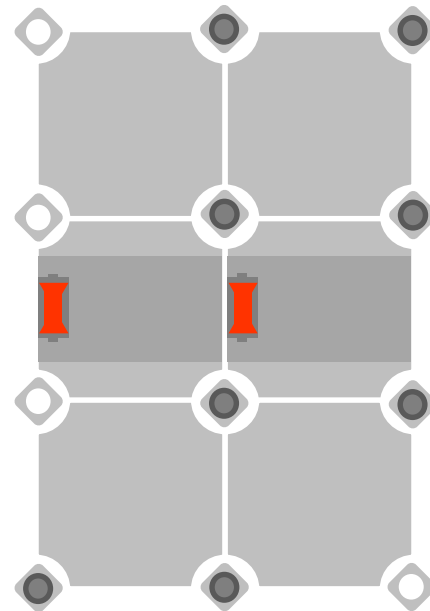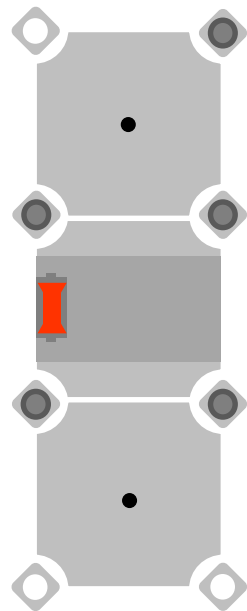

Uninstall all screws pointed out with red arrows.

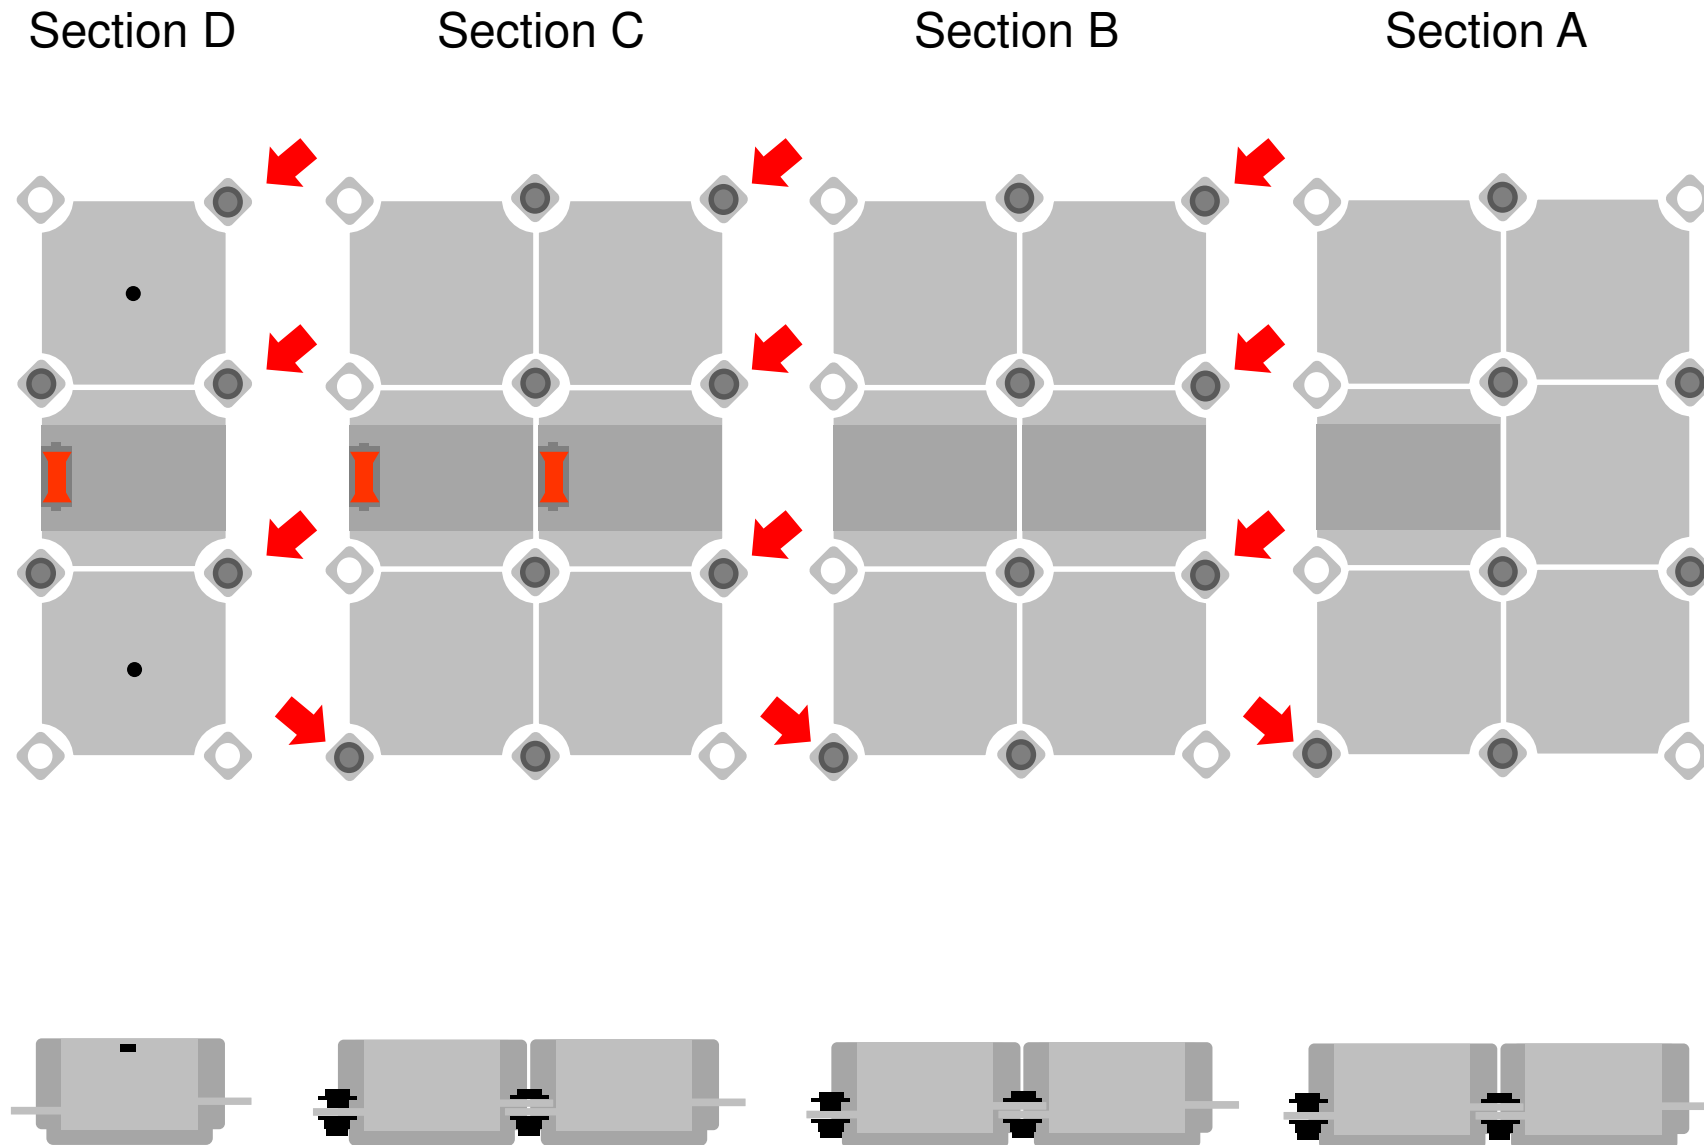

Push the sections A-D together and reinstall the screws.

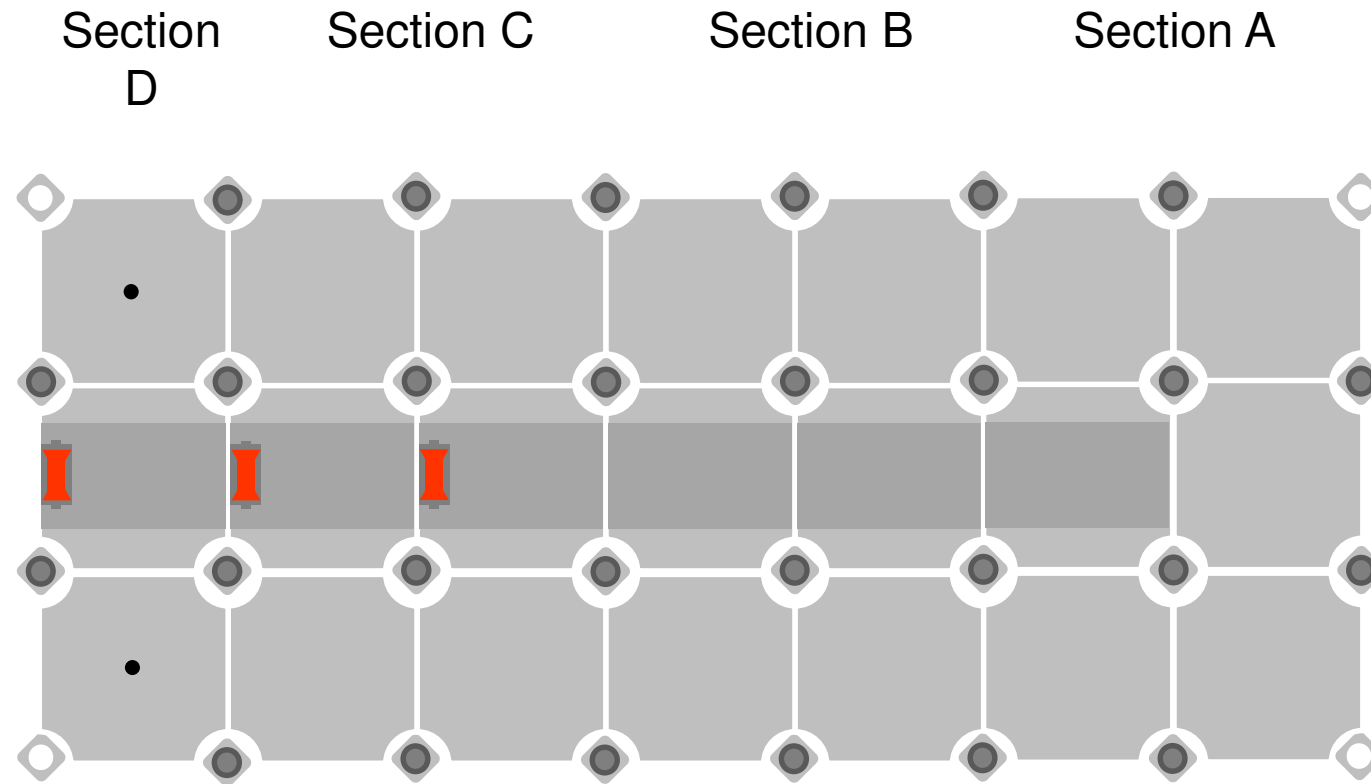


Side view:



⚠ IMPORTANT NOTICE

When installing Lug Connectors, do not overtighten it once you have reached the point of full turning.
After, unscrew by 1/4 in the opposite direction.

Launch the Jet Slider to the water and then open the caps in the rear two cubes.

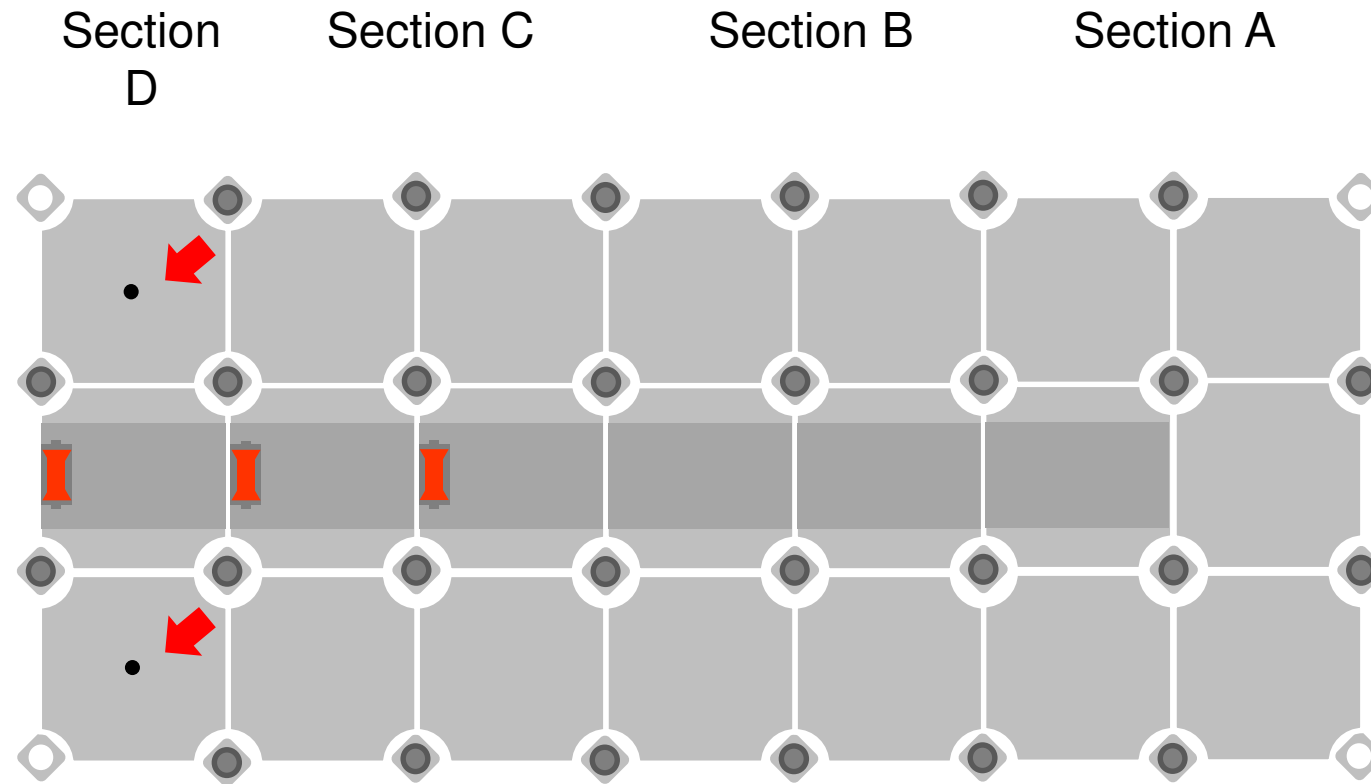


Side view:




Water surface

Add ballast water to the two rear cubes in section D. Then reinstall the caps.

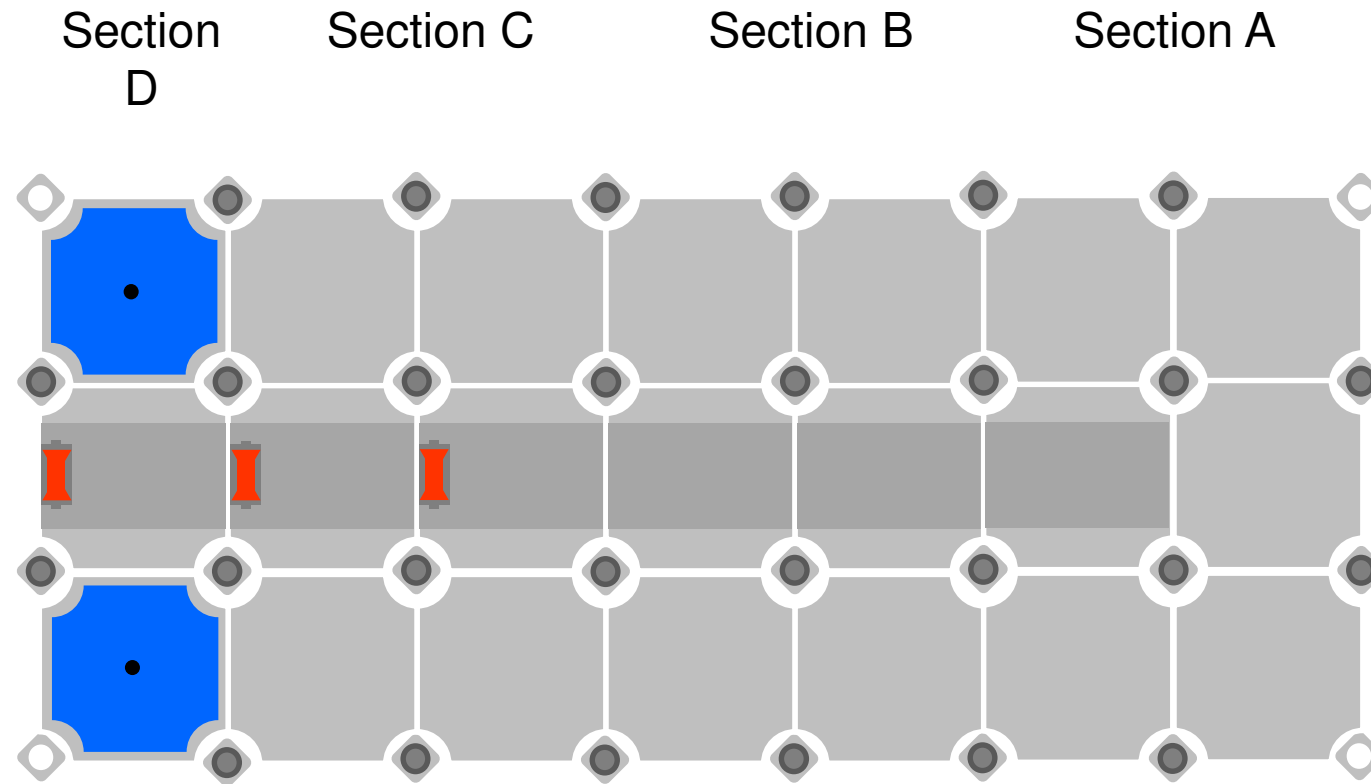

Side view:

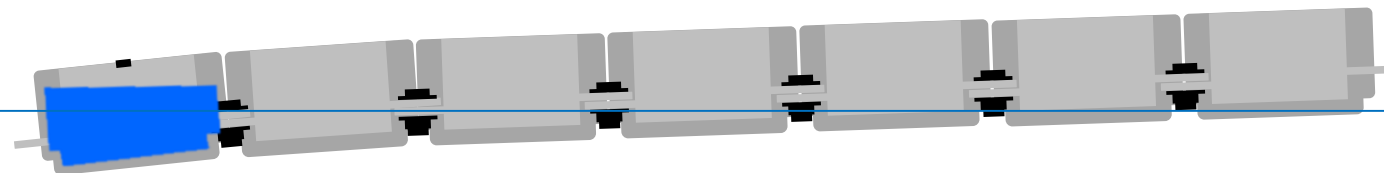

Water surface