 
 


Thank you for purchasing a BulDock Jet Slider 400!

This guide will show how to assemble, step by step.

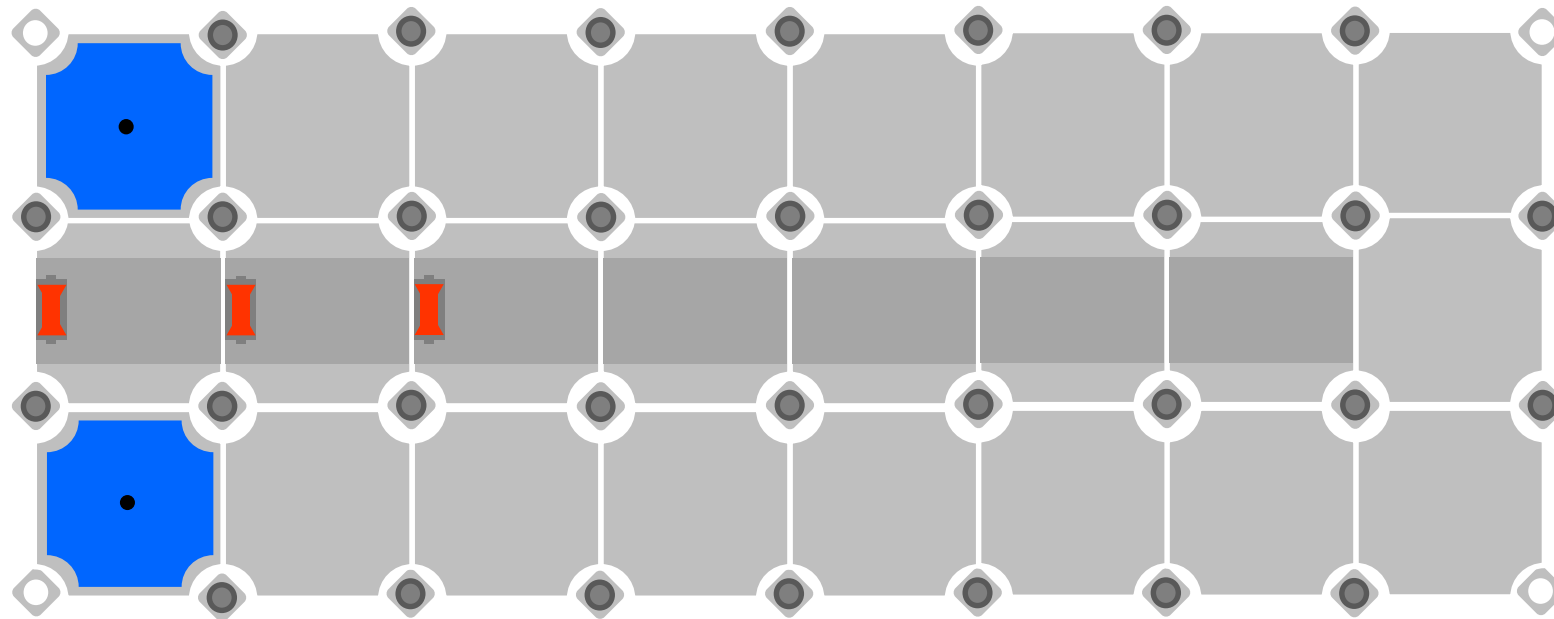

Side view:

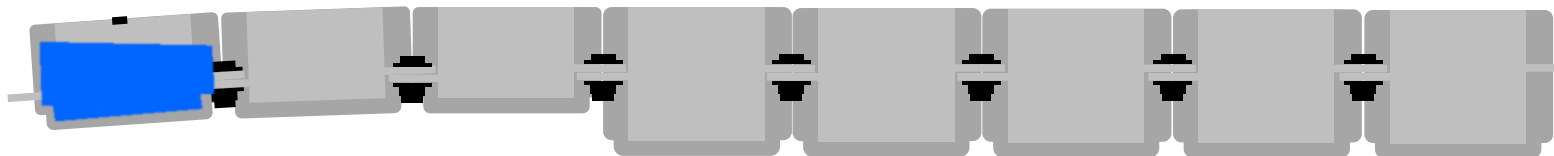

11x



4x



6x



3x



32x



 
4x




2x




A pallet is normally loaded like this.

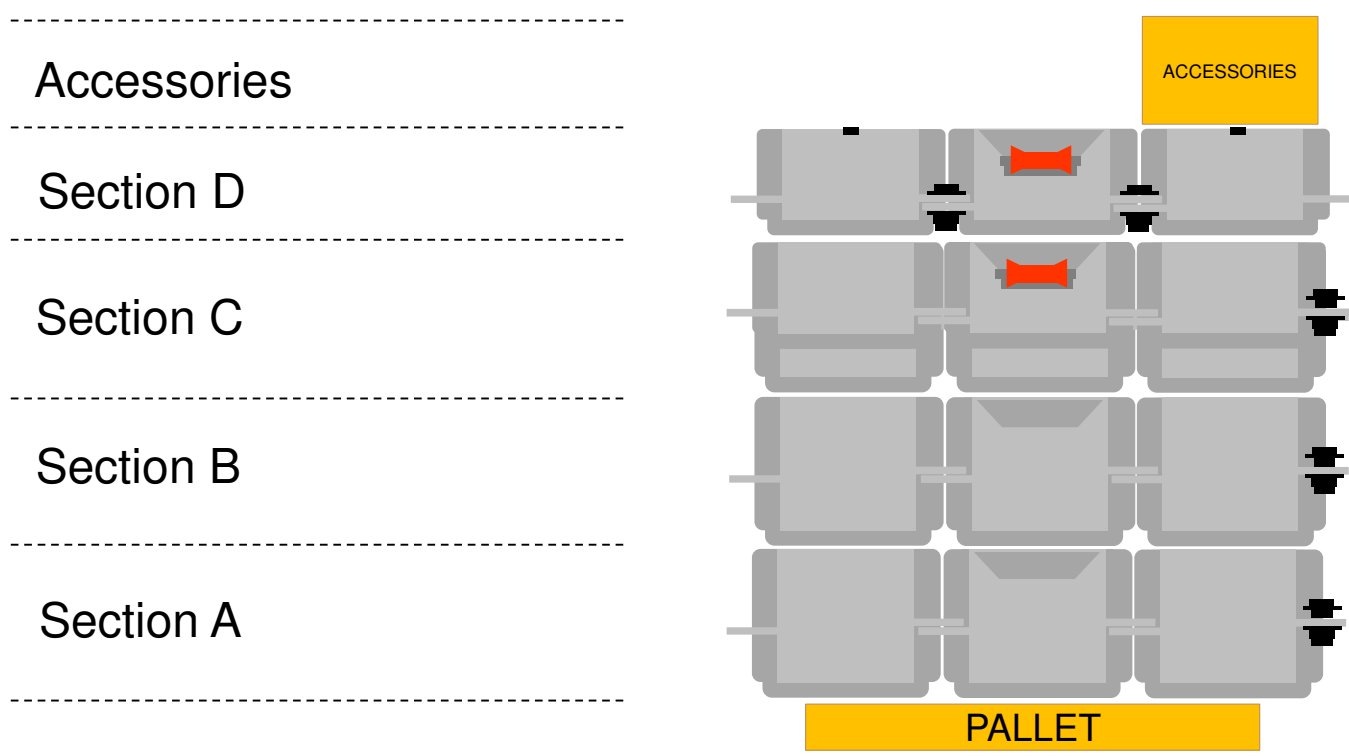


The sections are located like this:

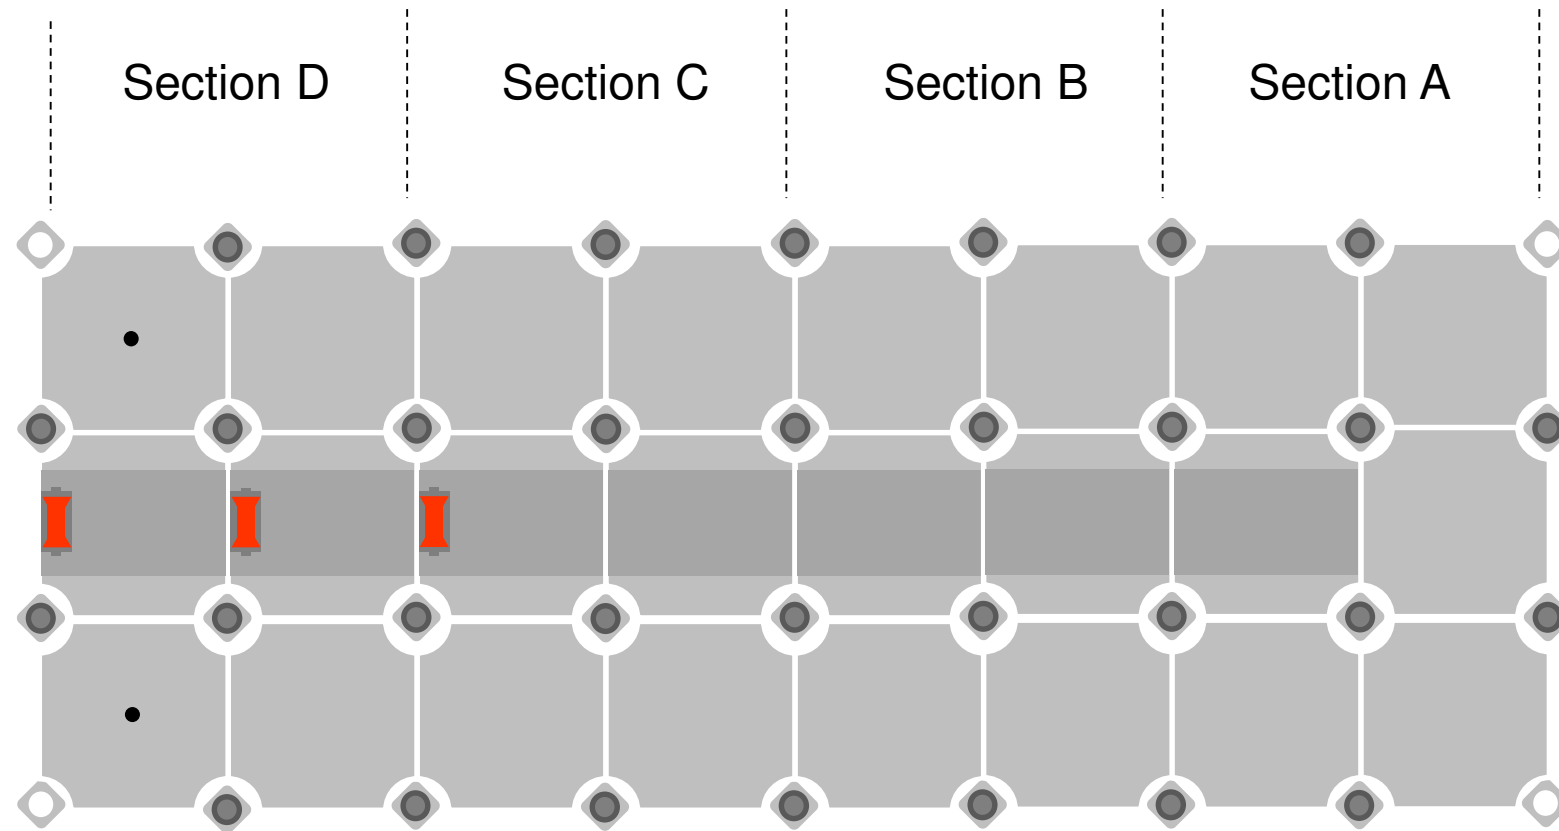 

Side view:

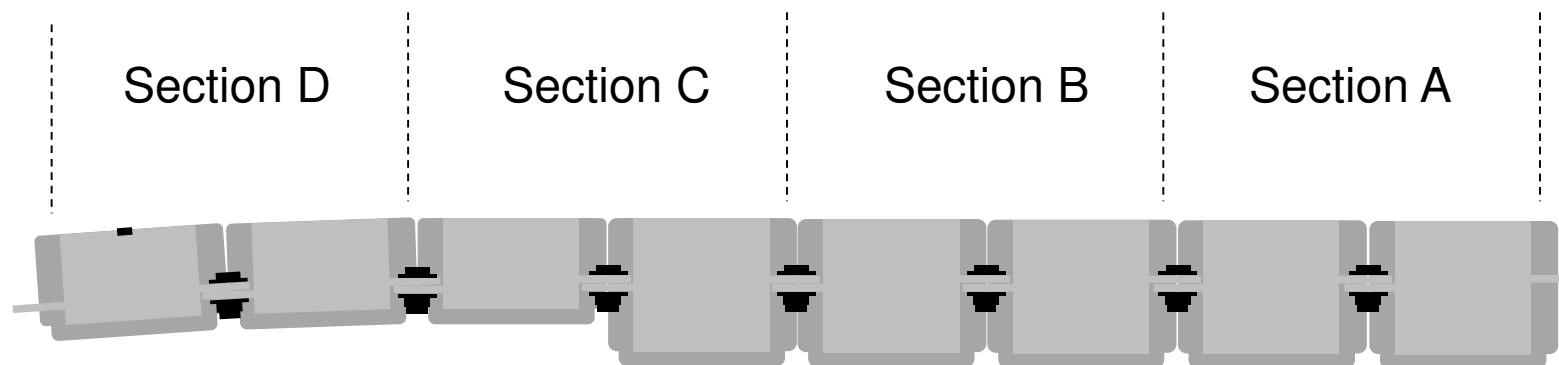 

 Valves are always pointing forward! Towards land!

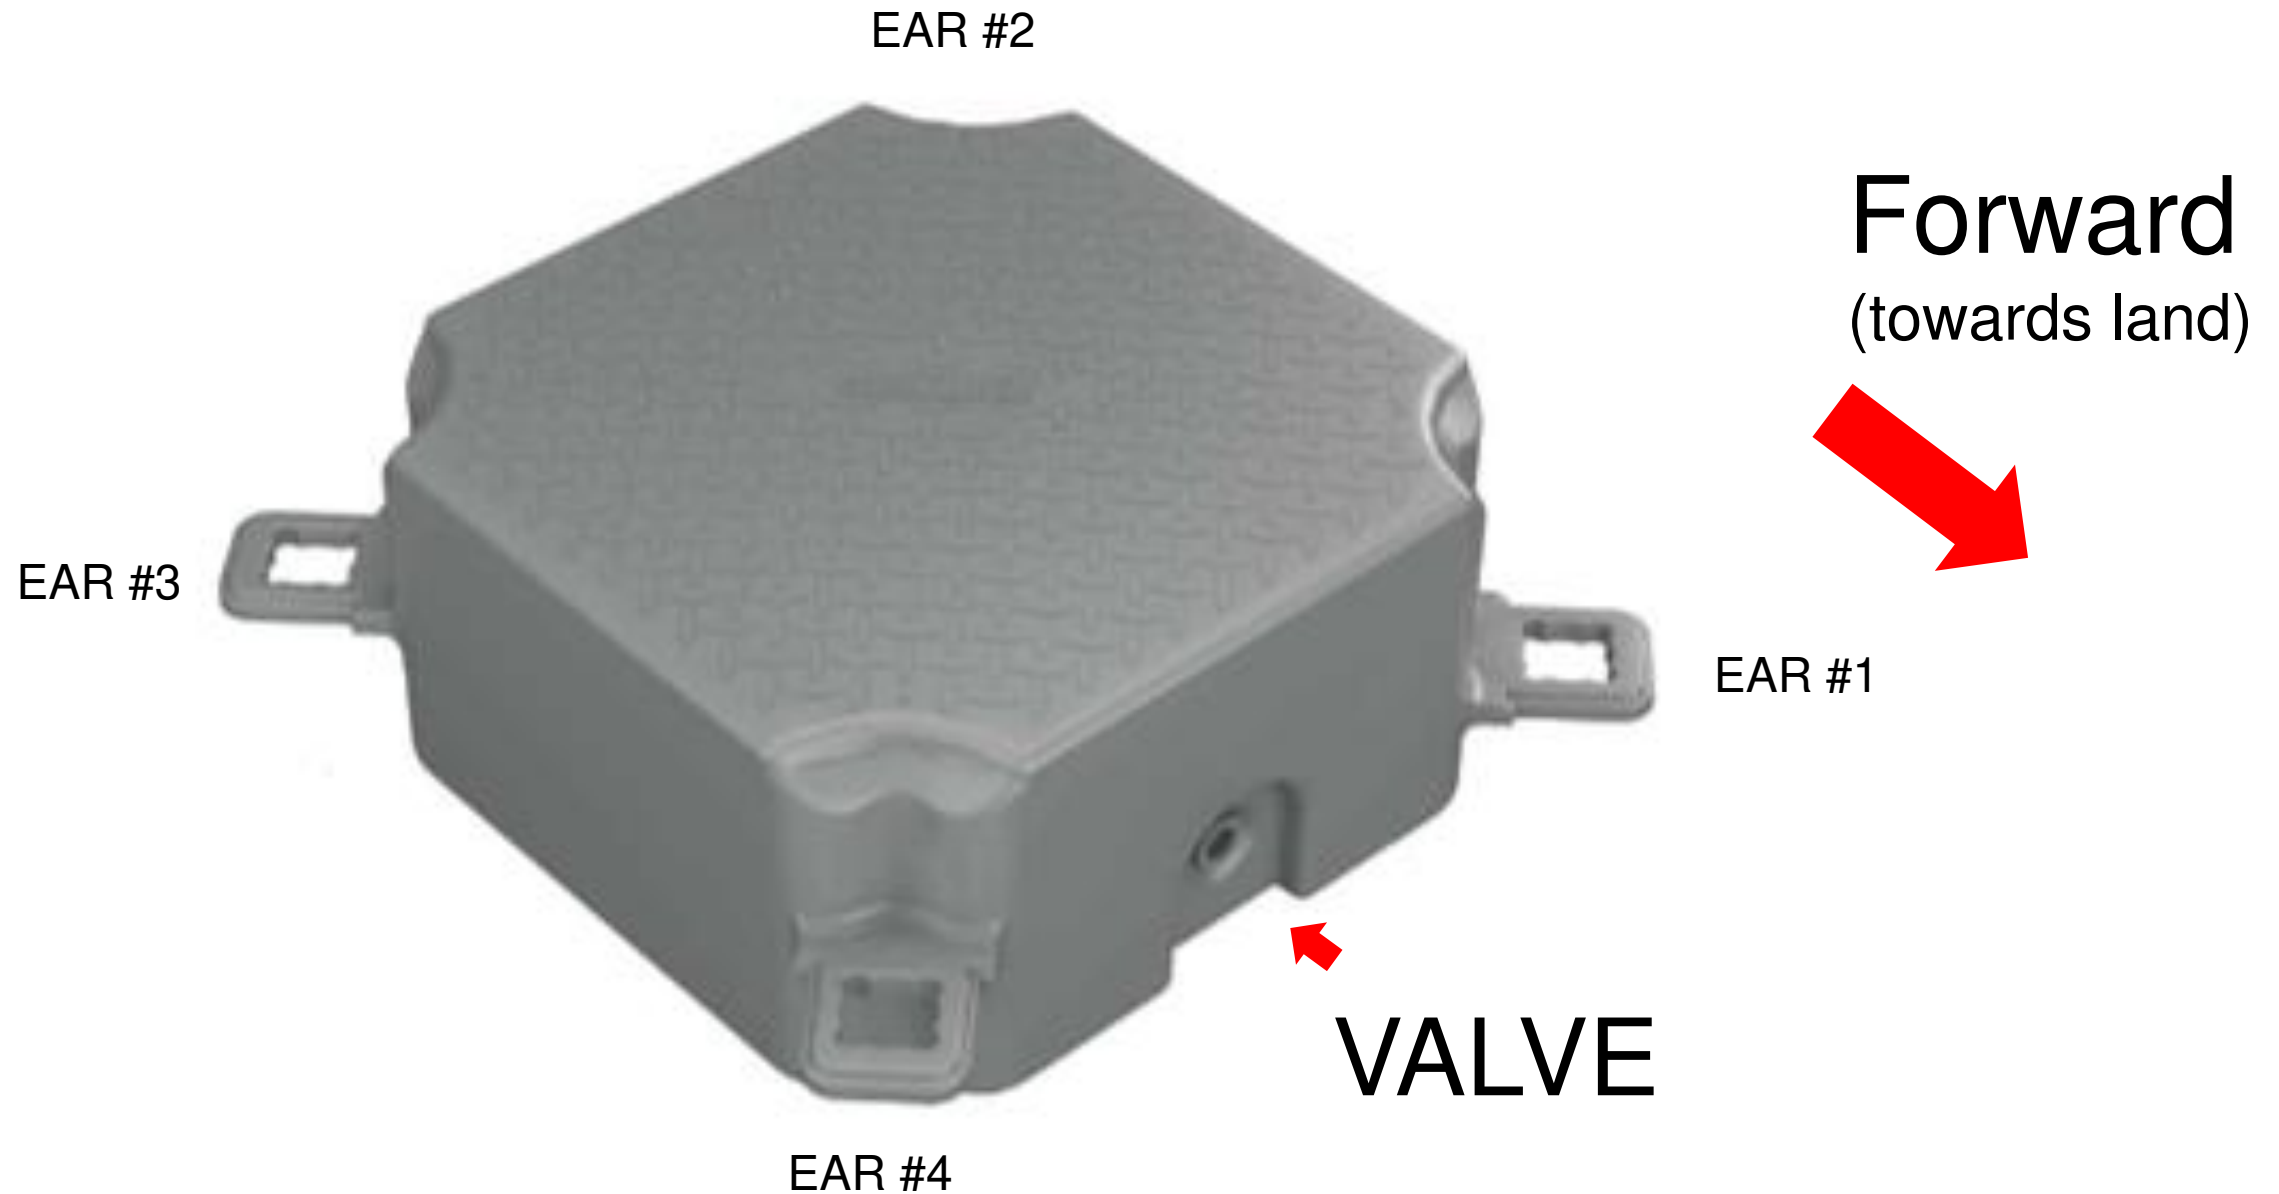



Please unload the pallet and place all sections on the ground.

Section D



Section C

Section B

  
Section A

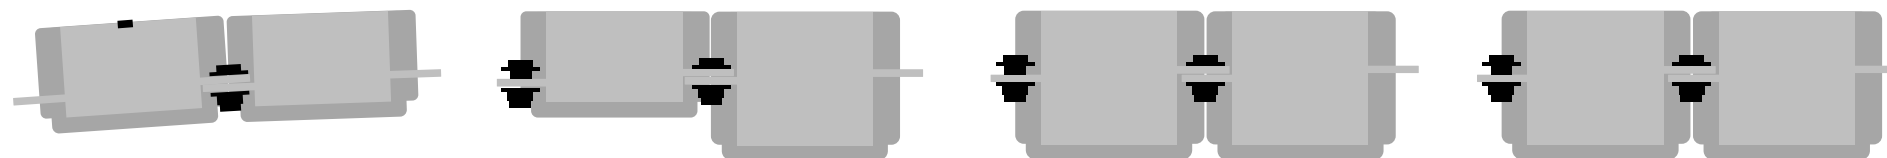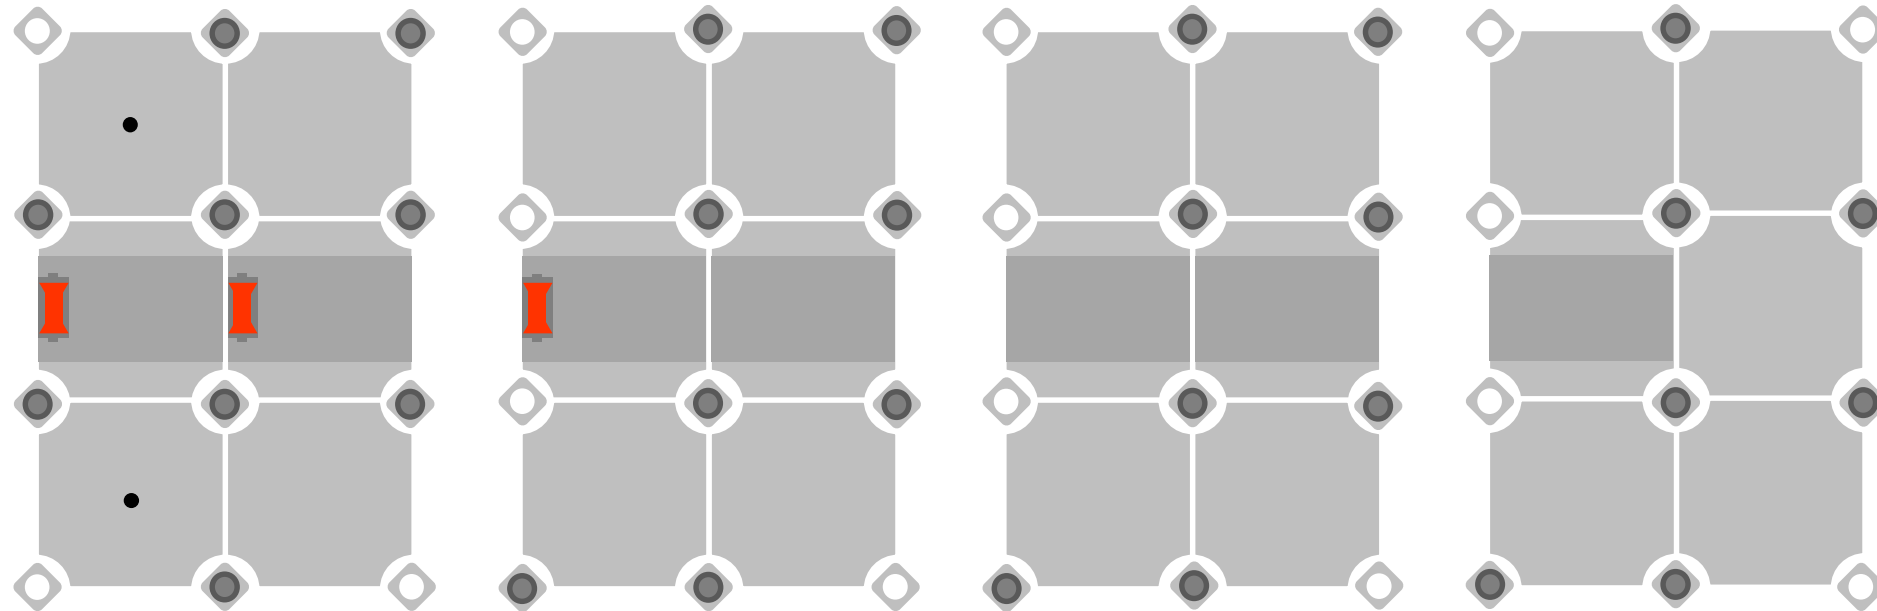

  
Uninstall all screws pointed out with red arrows.

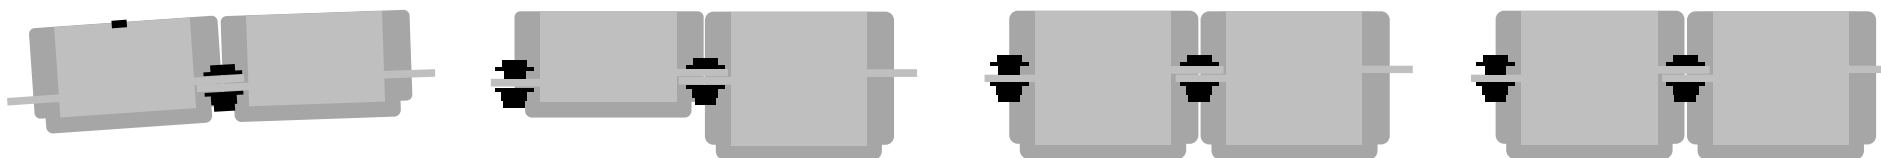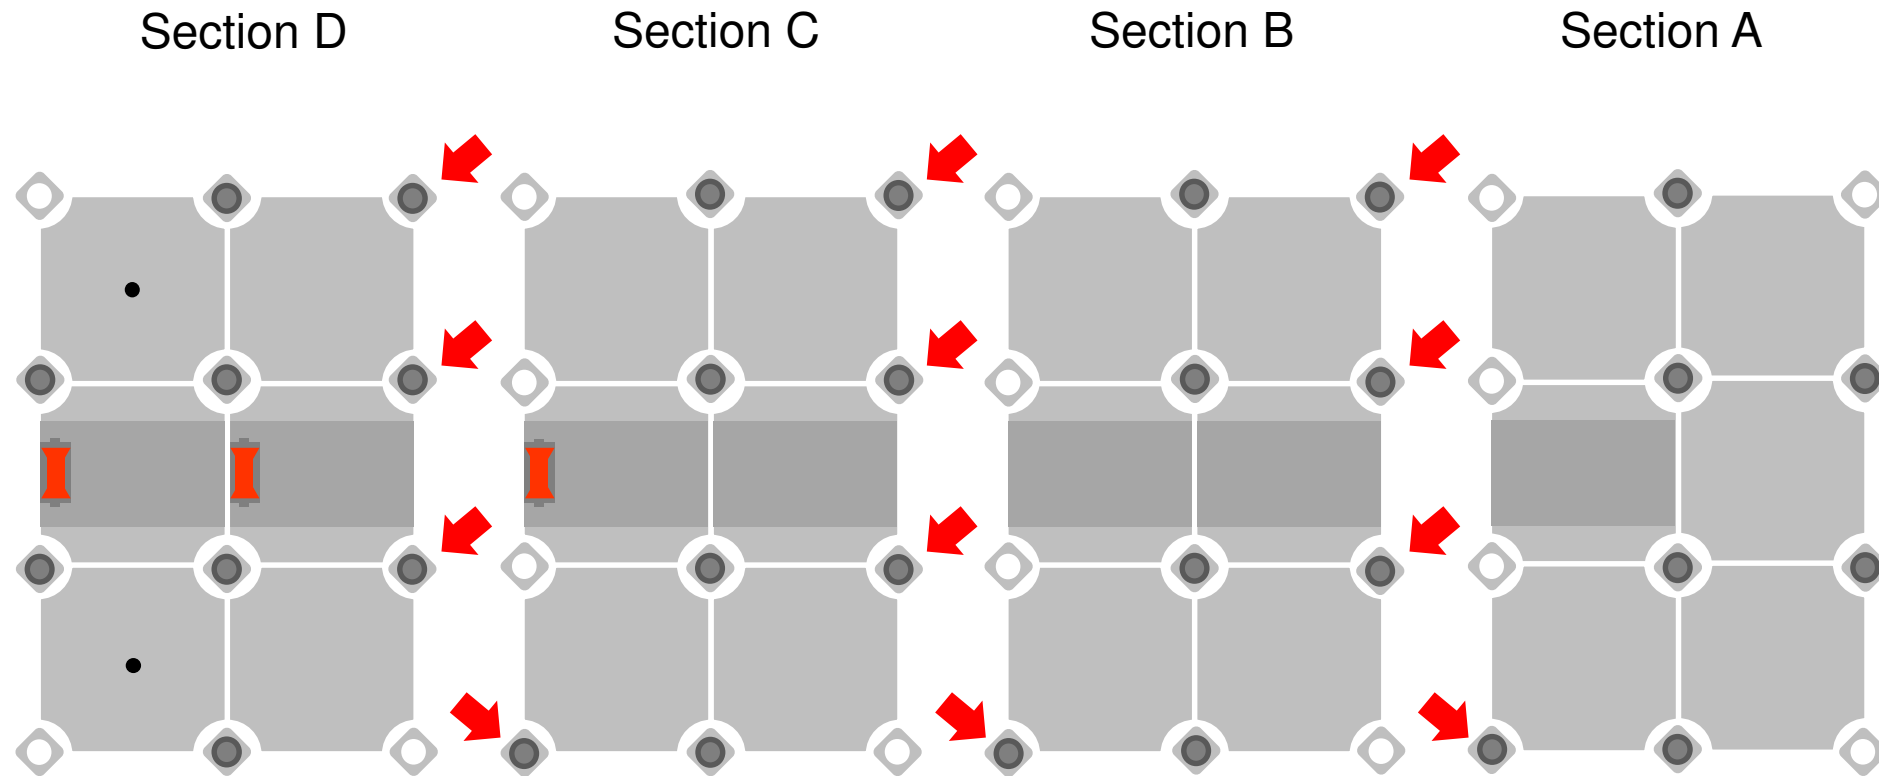

 Push the sections A-D together and reinstall the screws.

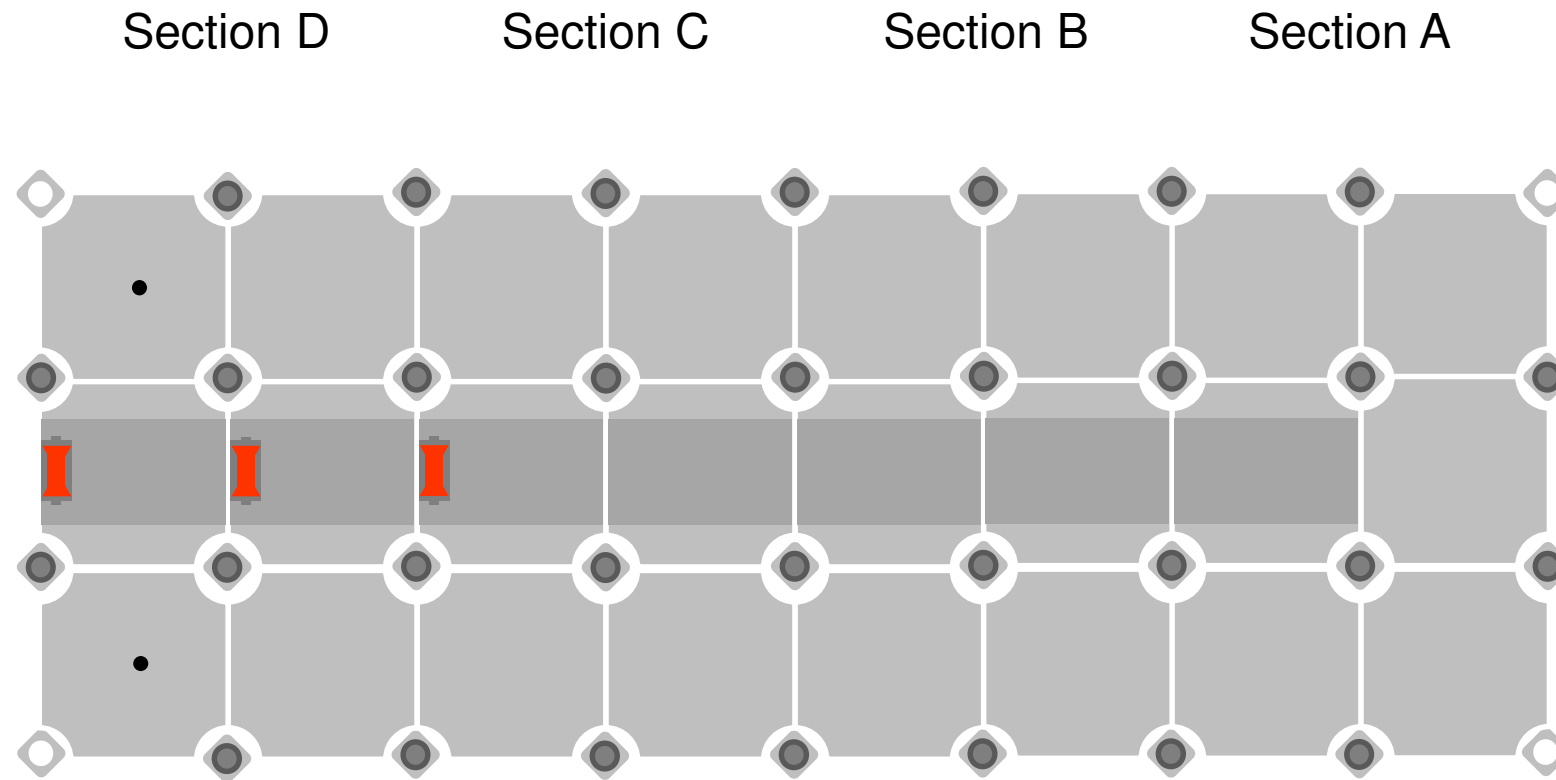


Side view:

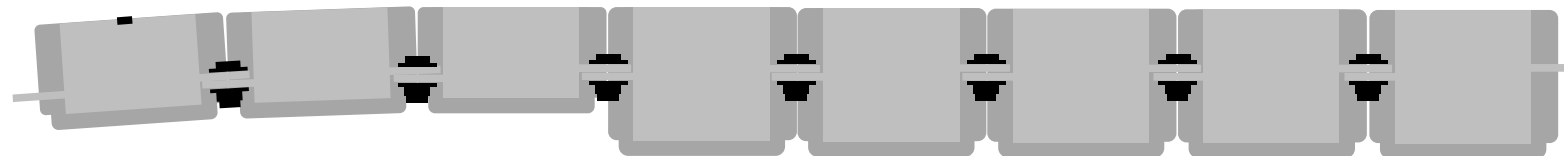 


⚠ IMPORTANT NOTICE

When installing Lug Connectors, do not overtighten it once you have reached the point of full turning.
After, unscrew by 1/4 in the opposite direction.

 
Launch the Jet Slider to the water and then open the caps in the rear two cubes.

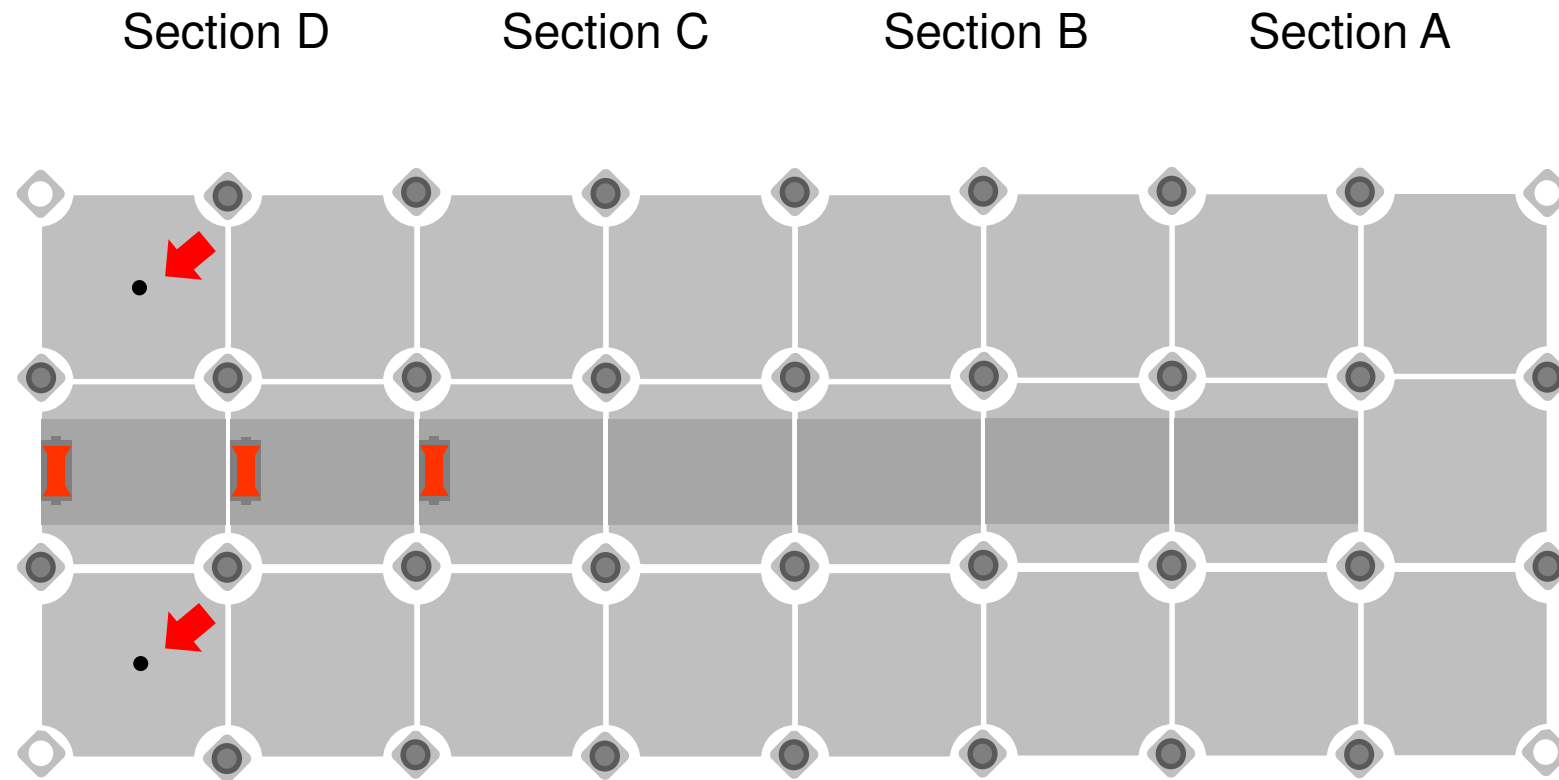


Side view:

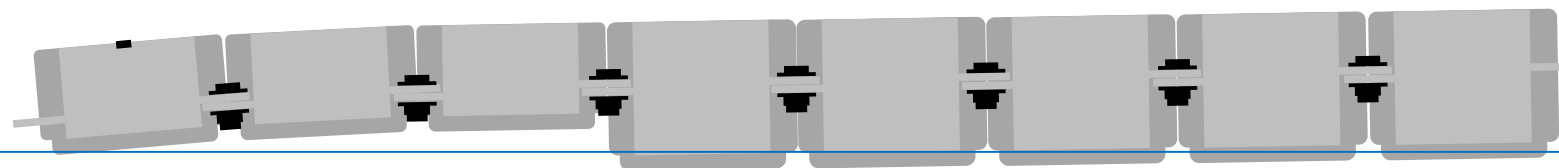 

 Add ballast water to the two rear cubes in section D. Then reinstall the caps.

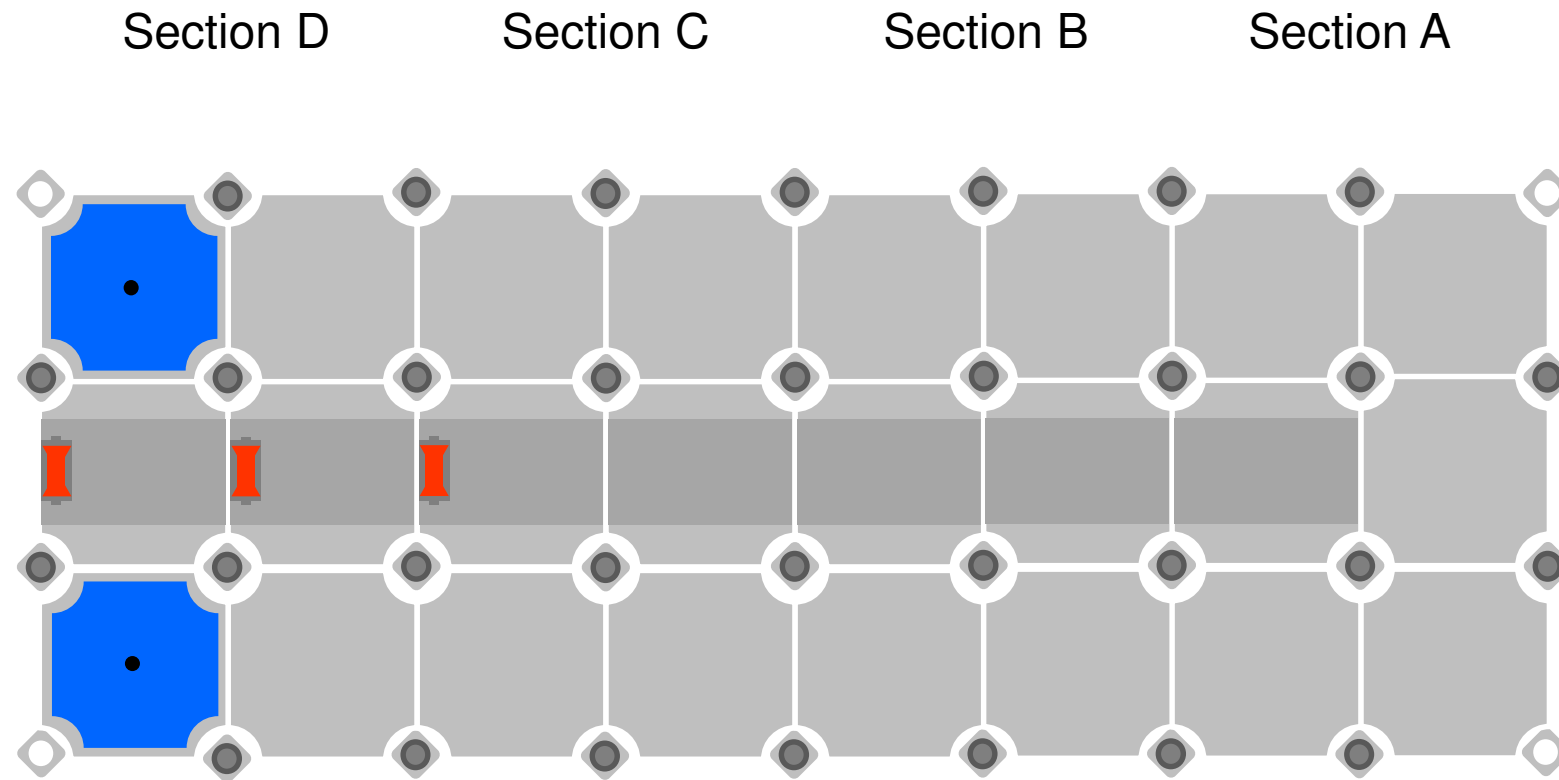

Side view:

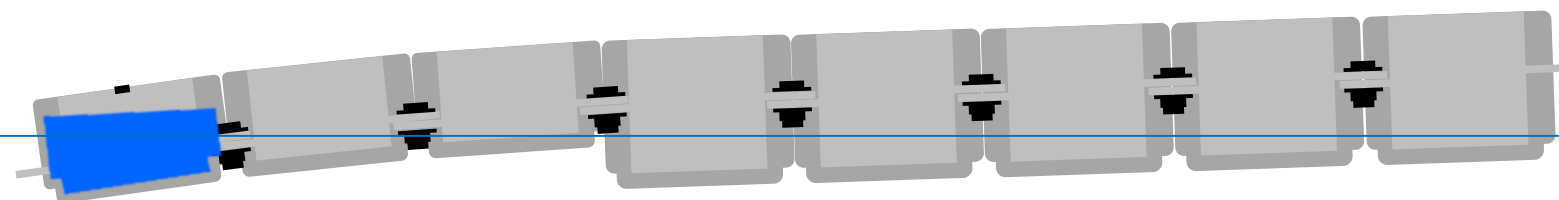 

Water surface